



23688823

M400 Series Electromagnetic Locks



Retrofit Template Overlays


Contents

- 2 390 Single to M490 Single
- 3 350 Single to M450 Single
- 4 320 Single to M420 Single
- 5 392 Double to M492 Double
- 6 352 Double to M452 Double
- 7 322 Double to M422 Double
- 8 390DEL to M490DEL
- 9 390TJ Single to M490TJ Single
- 10 350TJ Single to M450TJ Single
- 11 320TJ Single to M420TJ Single
- 12 392TJ Double to M492TJ Double
- 13 352TJ Double to M452TJ Double
- 14 322TJ Double to M422TJ Double
- 15 390G to M490G


390 Single to M490 Single

	Retrofitting From: 390 Single
	To New Lock: M490 Single

RHR Installation

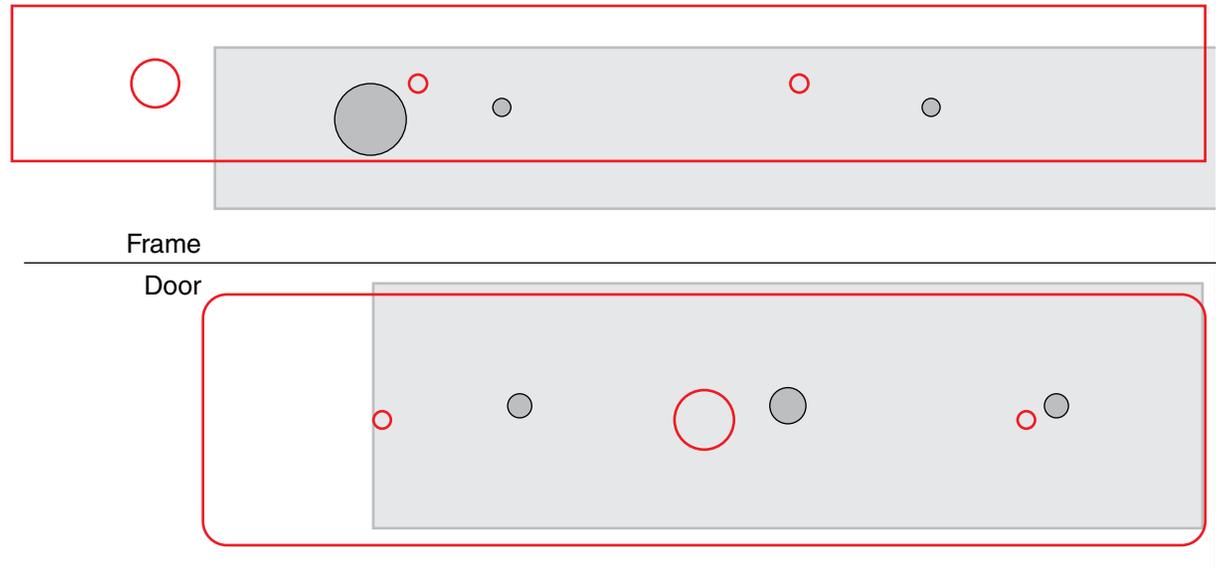


LHR Installation

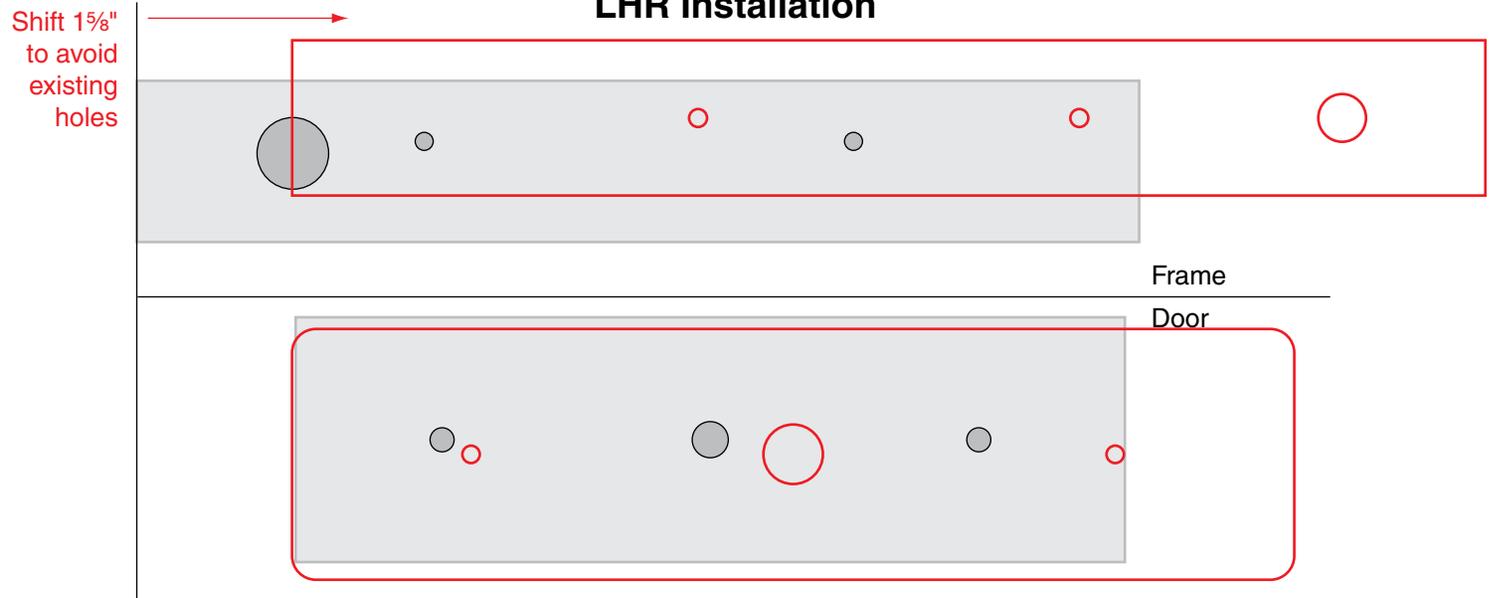


350 Single to M450 Single

	Retrofitting From: 350 Single
	To New Lock: M450 Single

RHR Installation

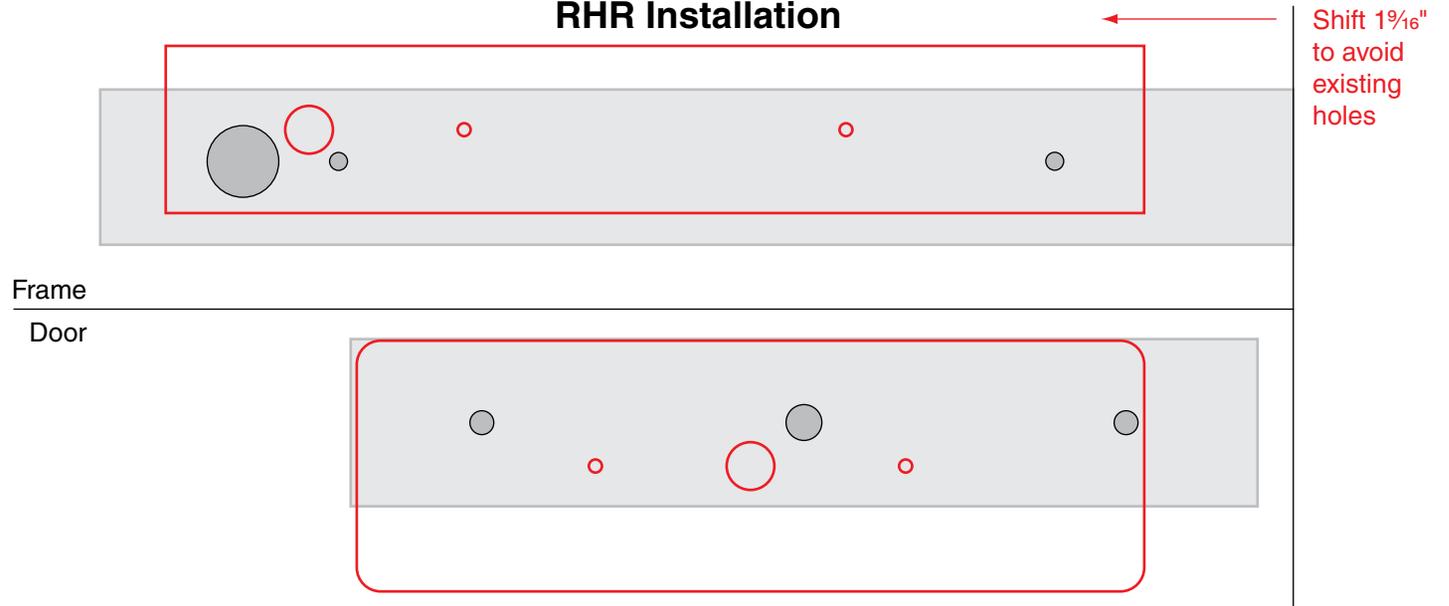

LHR Installation

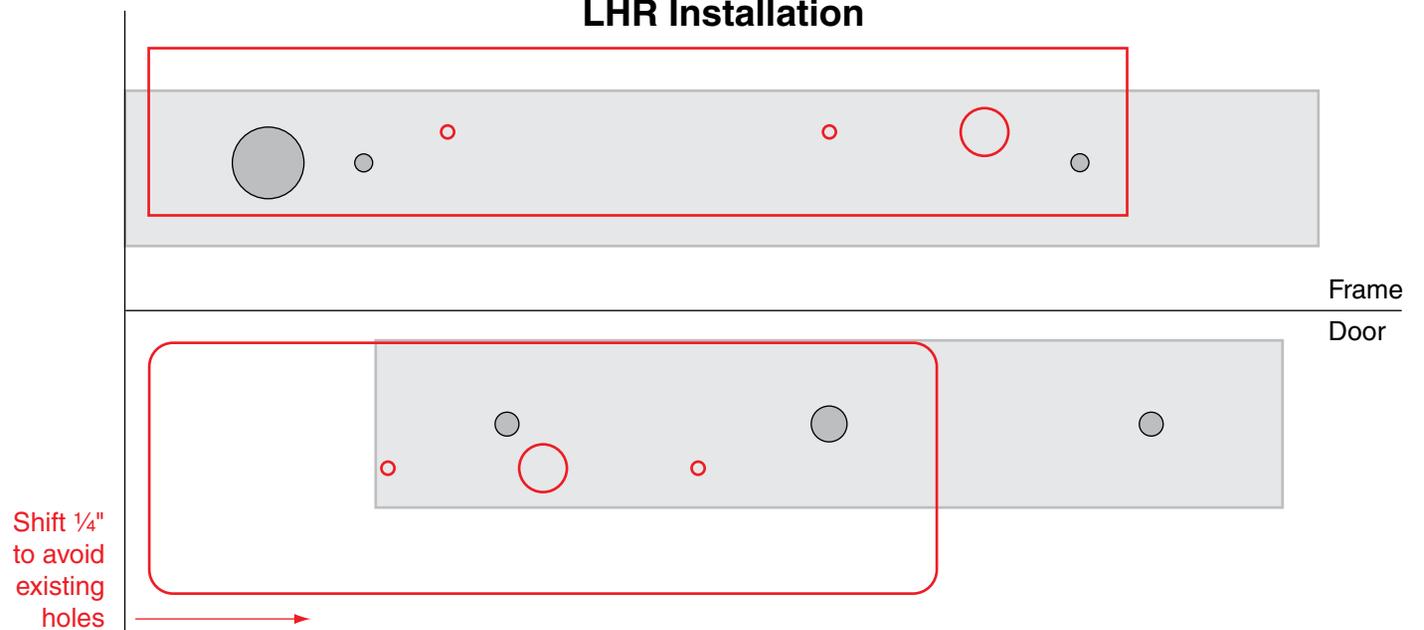

320 Single to M420 Single


	Retrofitting From: 320 Single
	To New Lock: M420 Single

RHR Installation



Frame

Door

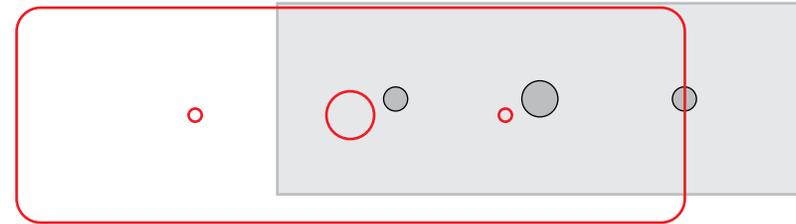


LHR Installation

Shift 1" to avoid existing holes




Frame

Door

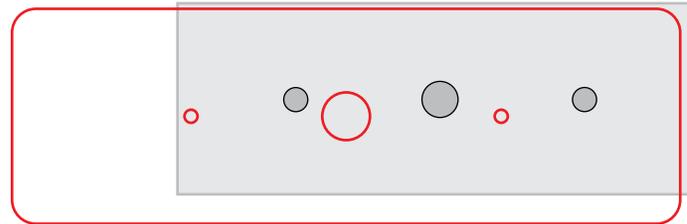


392 Double to M492 Double

	Retrofitting From: 392 Double
	To New Lock: M492 Double

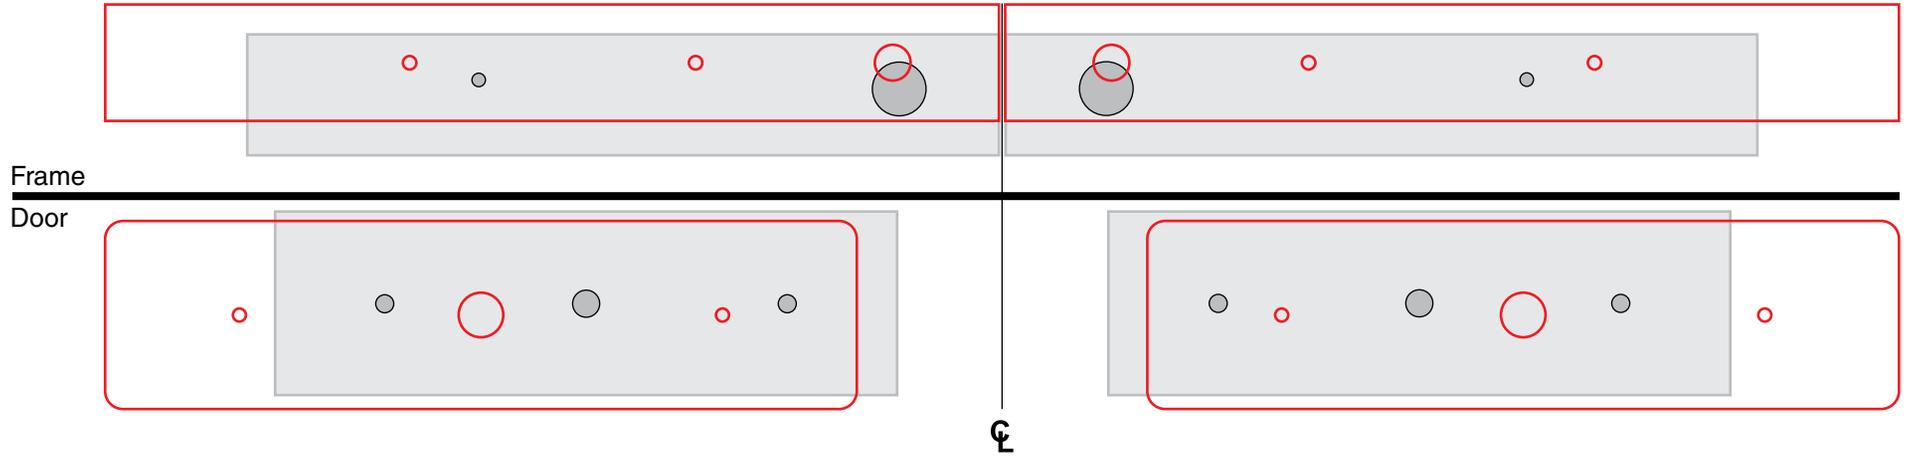


352 Double to M452 Double

	Retrofitting From: 352 Double
	To New Lock: M452 Double

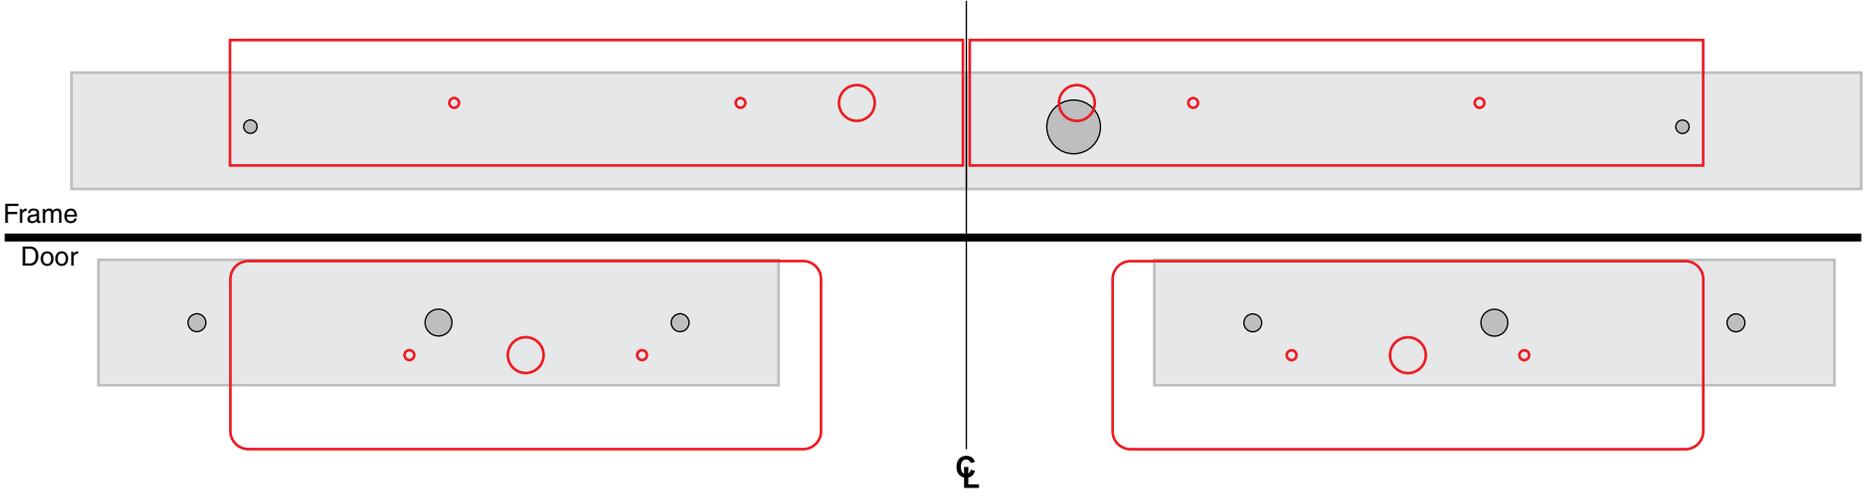



322 Double to M422 Double

	Retrofitting From: 322 Double
	To New Lock: M422 Double

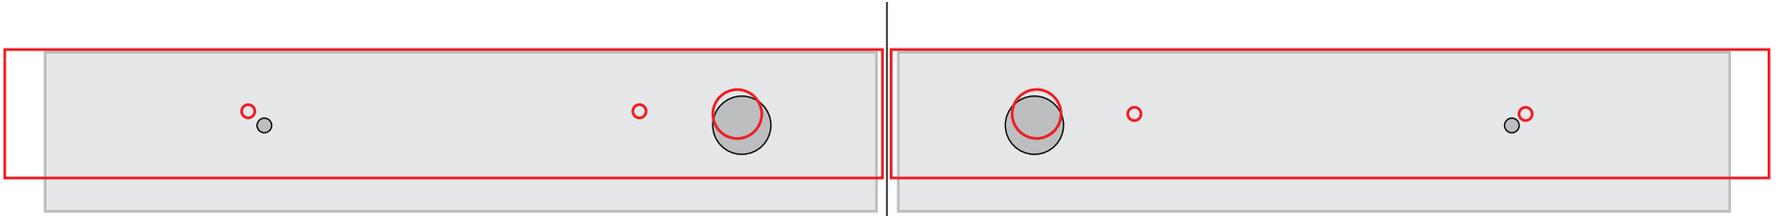

Frame

Door

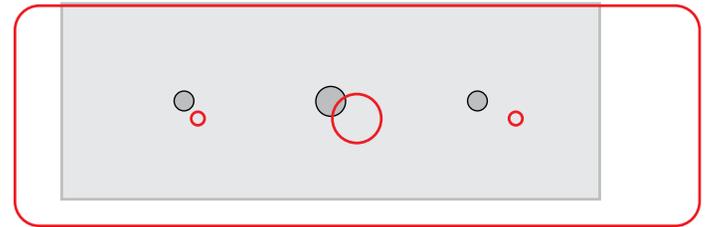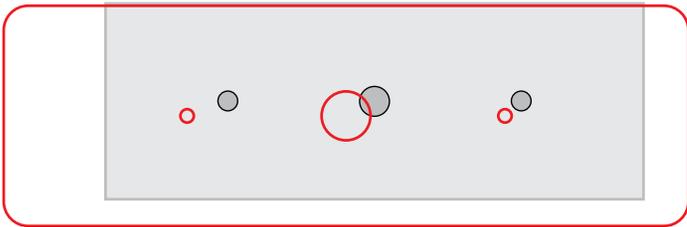

⌘

	Retrofitting From: 390DEL
	To New Lock: M490DEL


RHR Installation



Shift 1/8" to avoid existing holes


Frame

Door

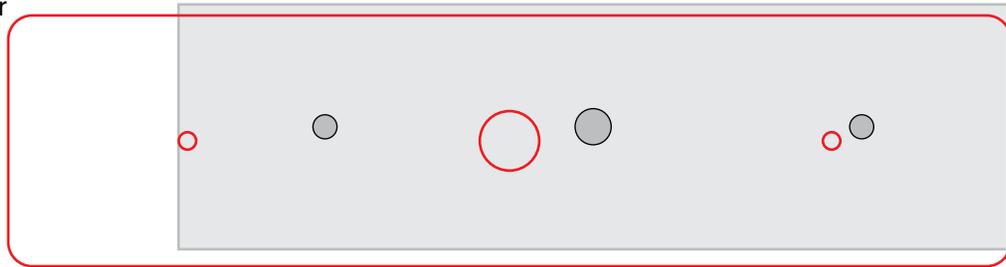


LHR Installation

Shift 1 5/8" to avoid existing holes

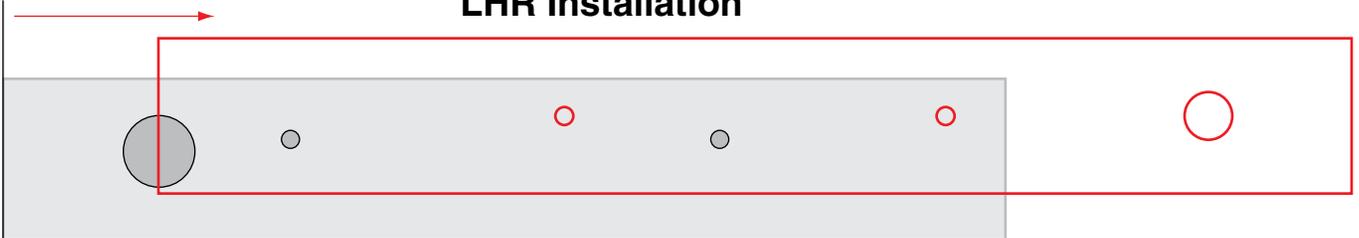


Frame

Door

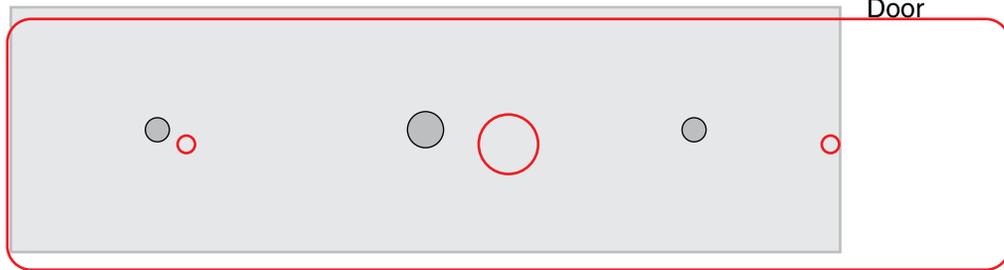


	Retrofitting From: 390TJ Single
	To New Lock: M490TJ Single

RHR Installation

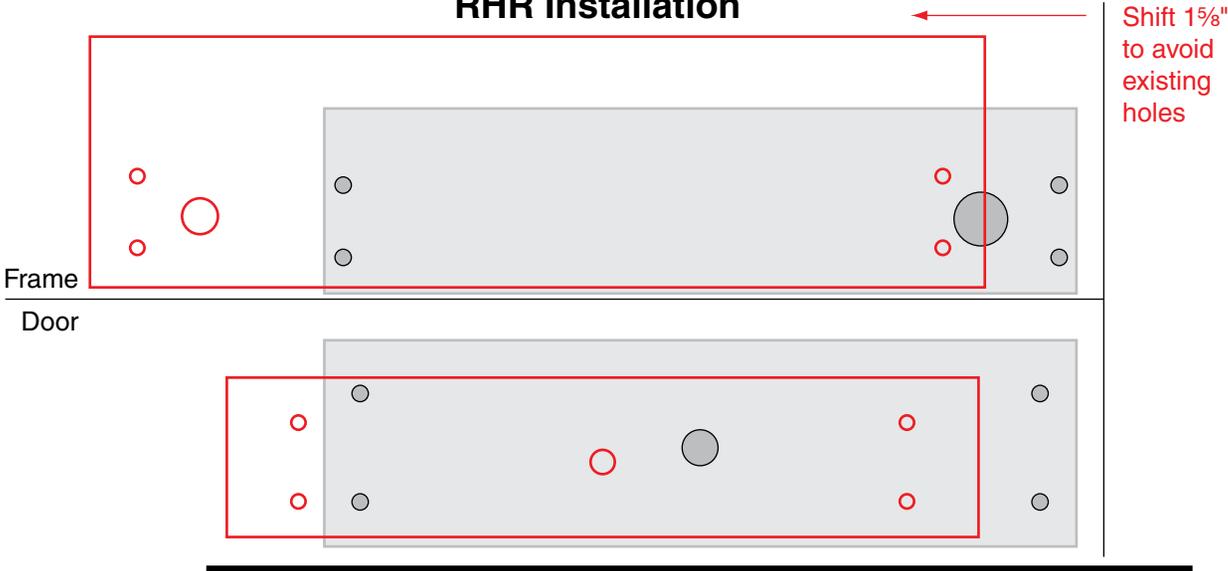


LHR Installation

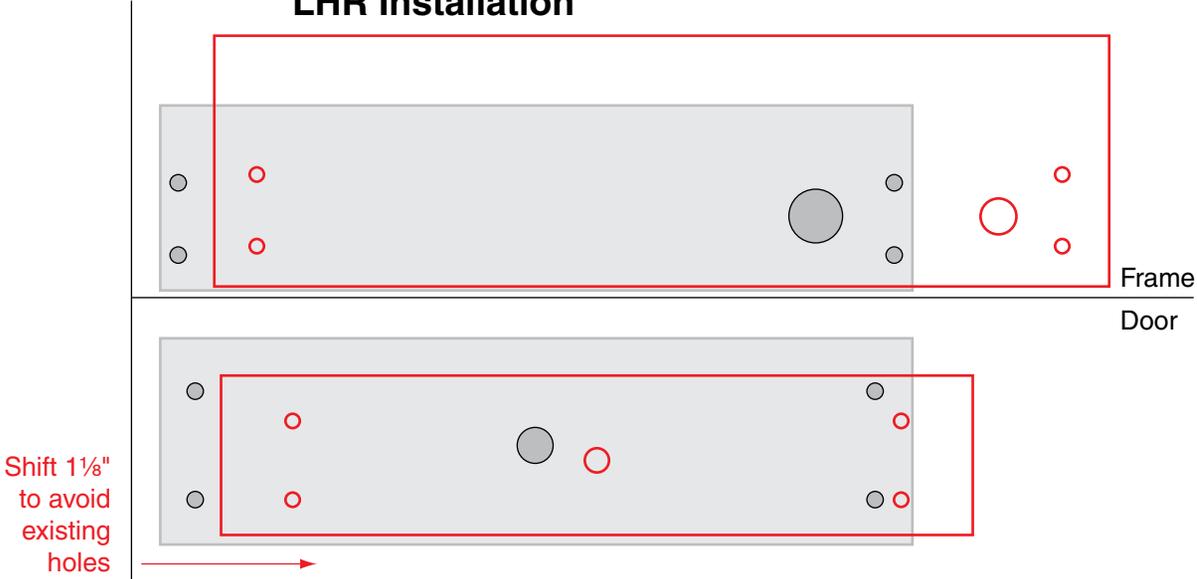


350TJ Single to M450TJ Single

	Retrofitting From: 350TJ Single
	To New Lock: M450TJ Single

RHR Installation

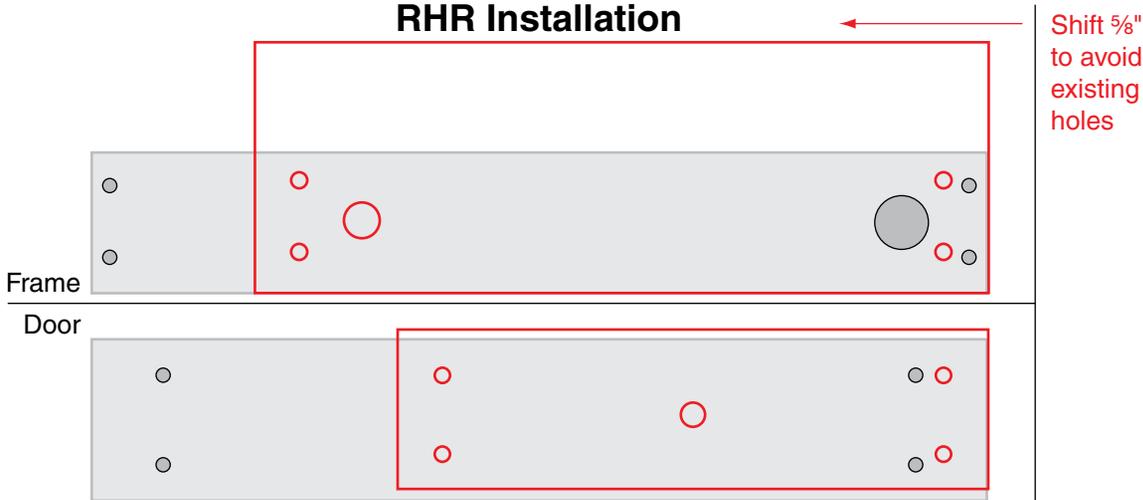


LHR Installation

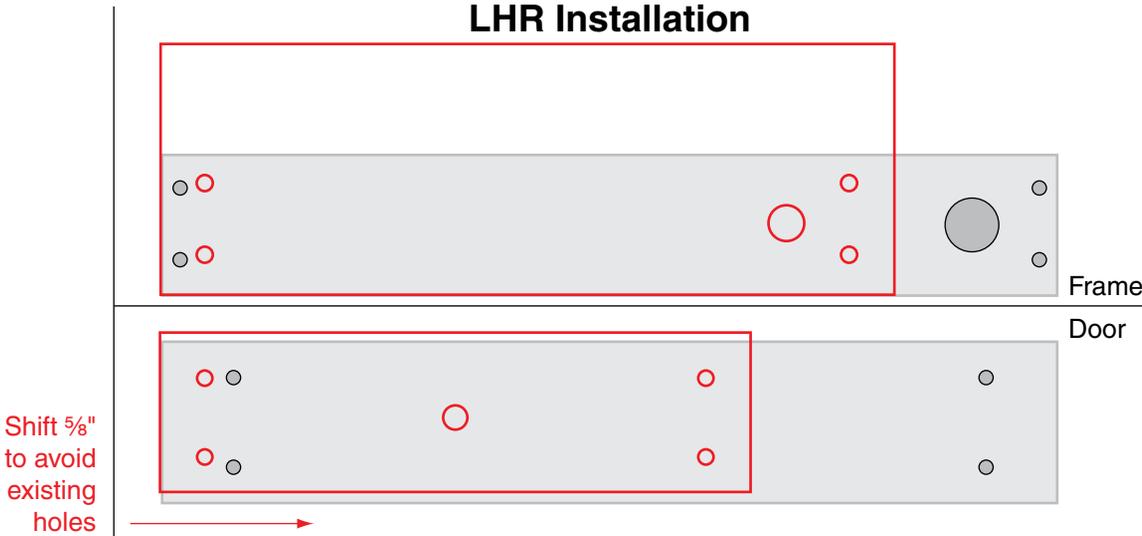


	Retrofitting From: 320TJ Single
	To New Lock: M420TJ Single

RHR Installation

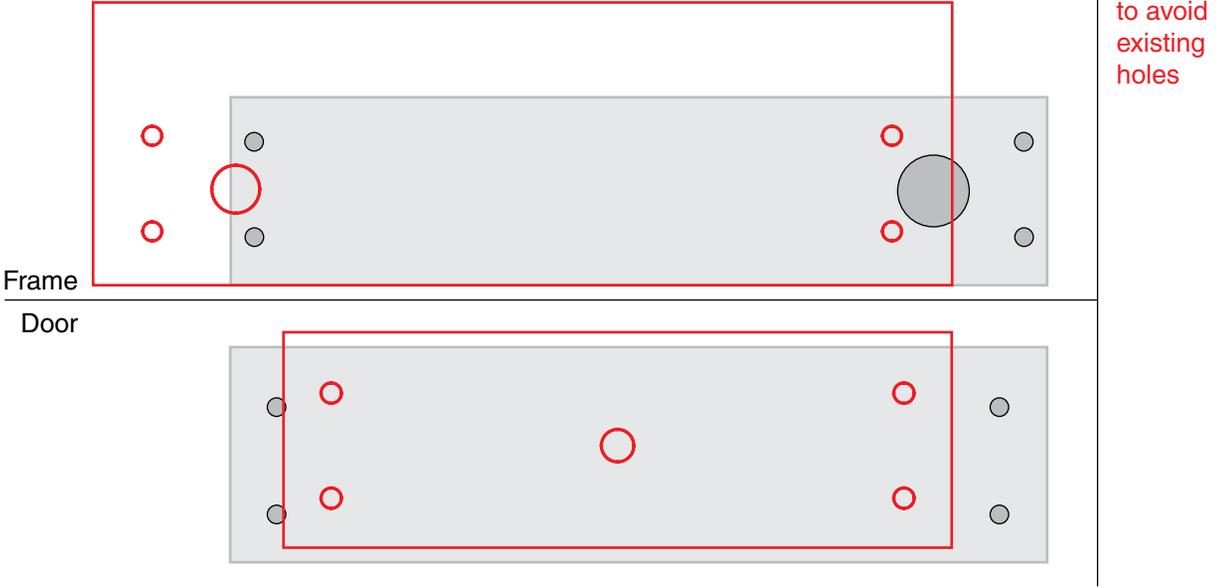


LHR Installation

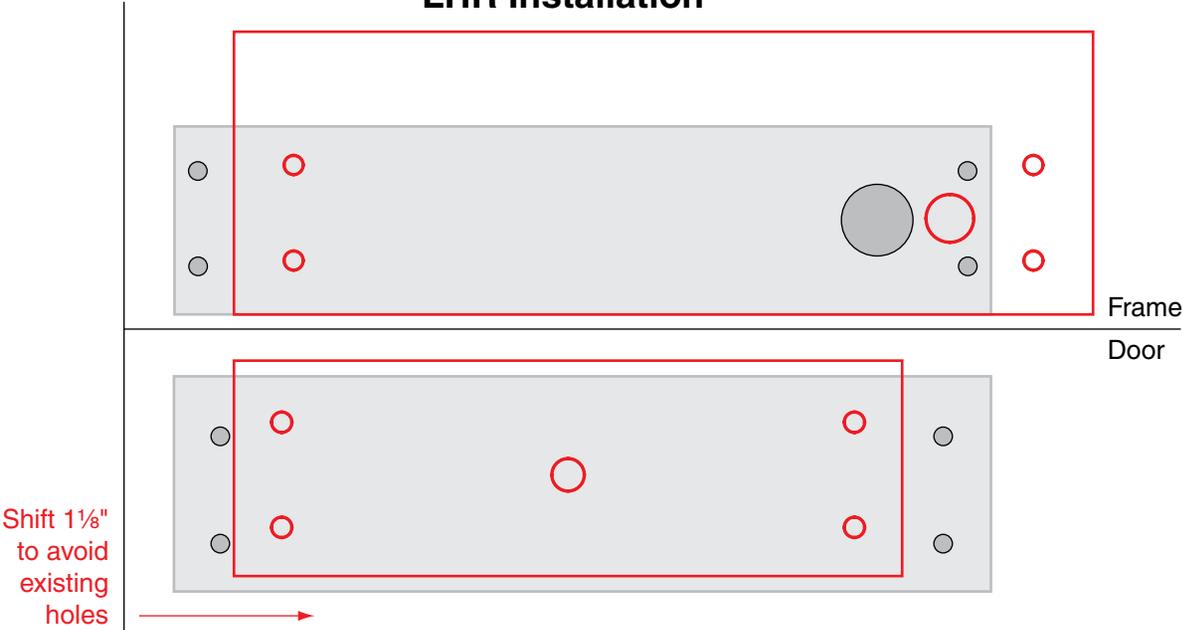


392TJ Double to M492TJ Double

	Retrofitting From: 392TJ Double
	To New Lock: M492TJ Double

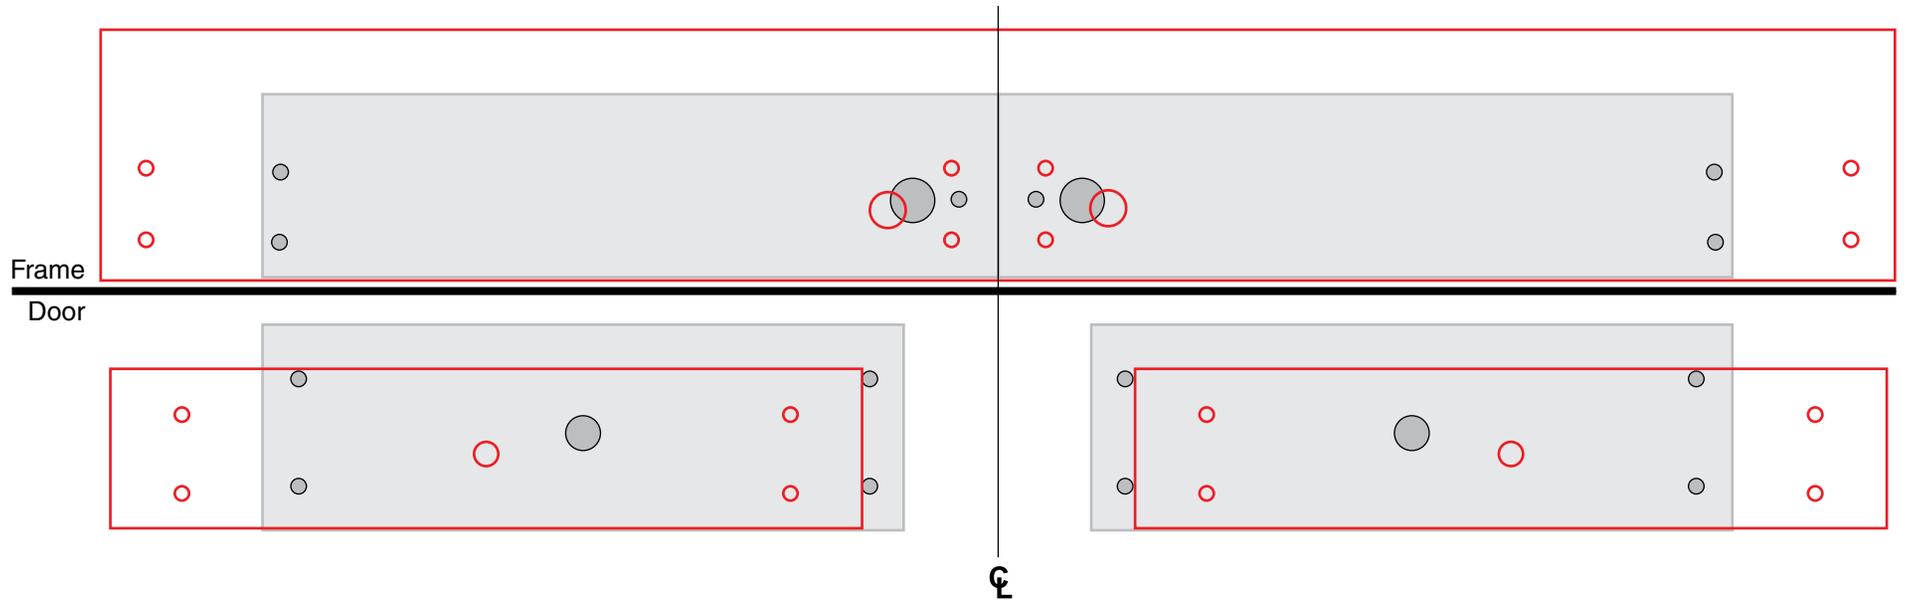


352TJ Double to M452TJ Double

	Retrofitting From: 352TJ Double
	To New Lock: M452TJ Double

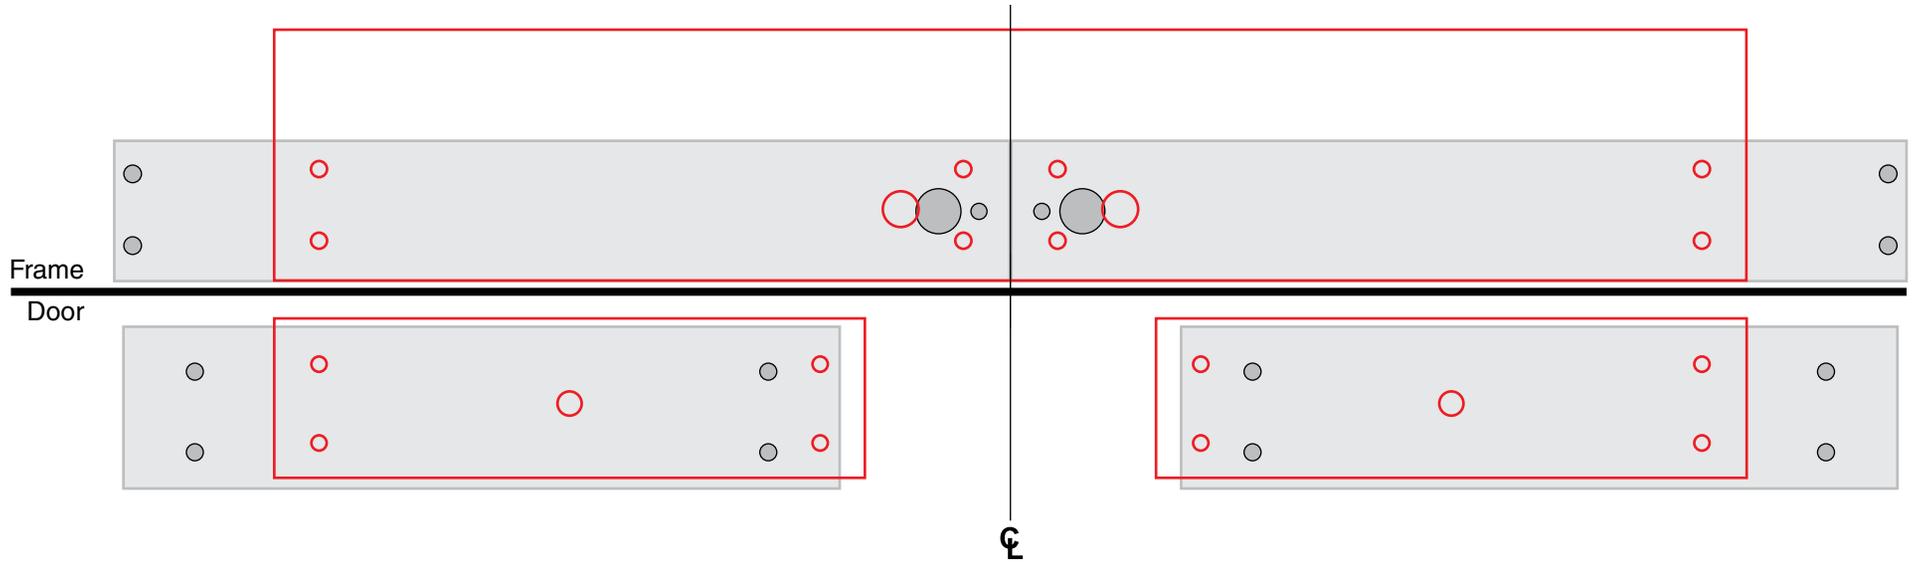

322TJ Double to M422TJ Double

	Retrofitting From: 322TJ Double
	To New Lock: M422TJ Double

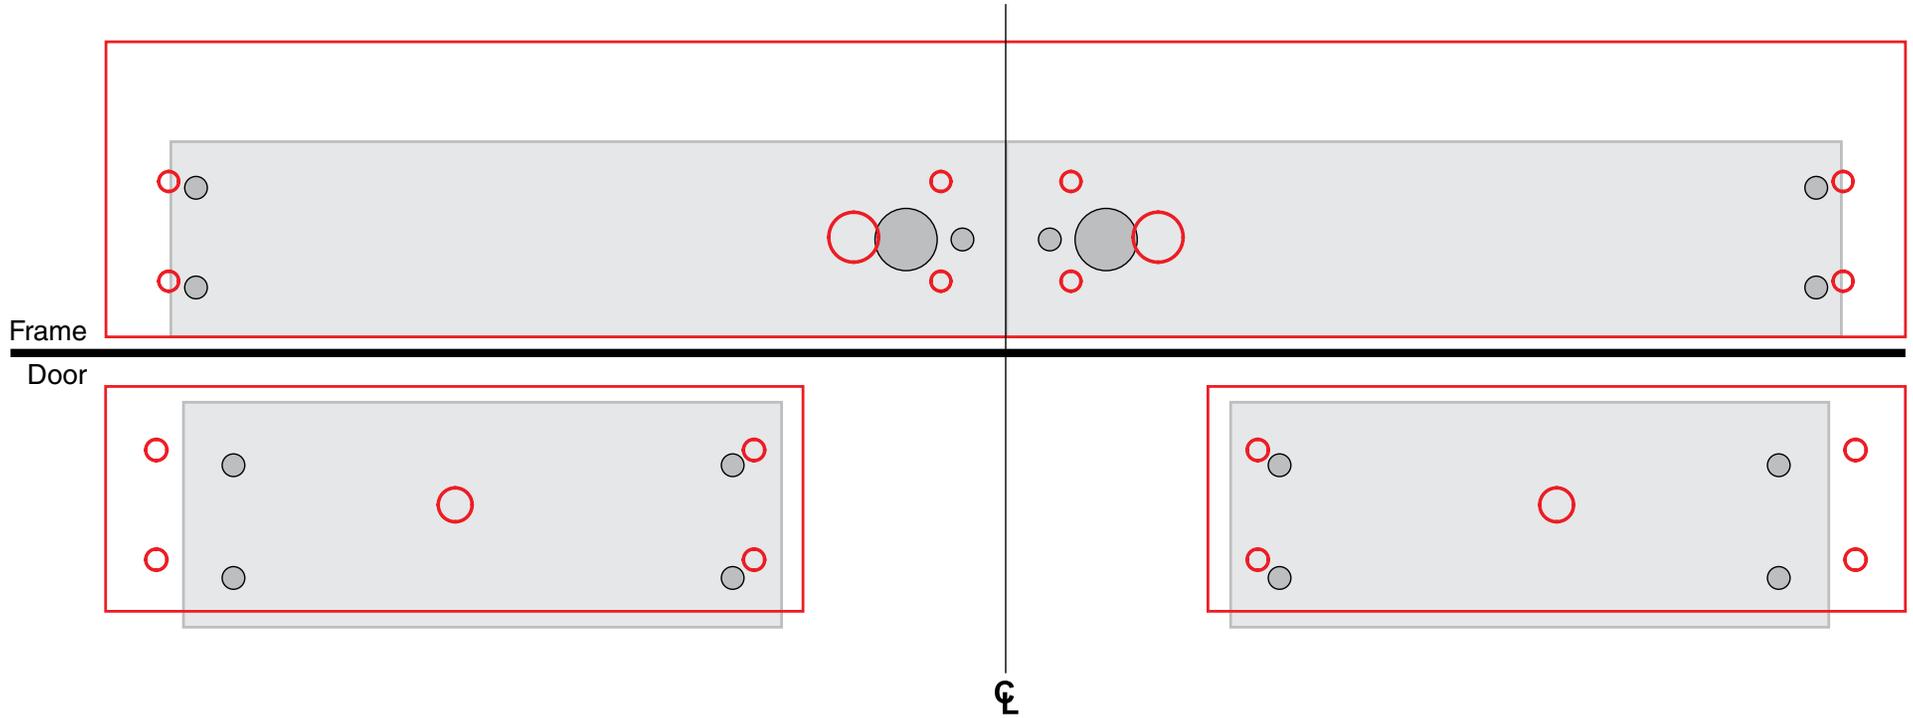

390G to M490G

	Retrofitting From: 390G
	To New Lock: M490G

